

# INSTRUCTIONS FOR THE COTTON CANDY MACHINE / Customer Pickup

1



Unpack all pieces, place machine on a short table if possible (a 2' tall table will be easier to use)

2




Unscrew both Aluminum Wheels all the way down. Make sure both switches are in the OFF Position then plug in the machine.

3



1. Place the lower pan on top of the machine and make sure the netting and clips are securely in place (The pan just sits on top of the machine) on the 4 rubber bumpers.
2. Place the clear protector dome on top of the pan.

4

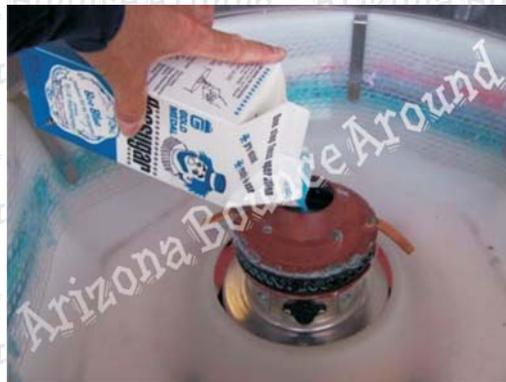

Fill the center of the machine with the supplied sugar only. Never fill the machine while it is spinning. (Use caution when refilling as spinner head is very hot and will cause burns).

# INSTRUCTIONS FOR THE COTTON CANDY MACHINE / Customer Pickup

5



Do not overfill the spinner head with sugar. You can change colors of the sugar anytime without dumping the existing sugar, just pour a different color in the spinner head.

6



Set the Heat Level to about 3/4 as shown. More heat may be needed during cooler weather or when you first start using the machine. As the machine starts making cotton candy you may need to reduce the heat.

7



Turn on both switches and within a minute the sugar should start to spin out and stick to the netting.

8



After the pan has filled with sugar proceed to the next step.

# INSTRUCTIONS FOR THE COTTON CANDY MACHINE / Customer Pickup

9



Spin the paper cone clockwise around the pan.

10



After the cone is full, place the cotton candy in the bag and repeat step 9.



Turn off both switches to stop the machine. **Enjoy!**

